

# MC1K

OPTIONAL MINI-USB WITH OBSERVER SOFTWARE AVAILABLE



The new ergonomic MC1K is a handheld survey meter using a built-in energy compensated GM detector. It detects gamma and x-rays up to 1000 mR/hr over 4 selectable ranges. A beep sounds and a count light flashes with each event detected.

## Detector

Energy compensated halogen-quenched GM tube.

## Operating Range

X1 position 0 - 1 mR/hr or 0 - .01 mSv/hr

X10 position 1 - 10 mR/hr or 0 - .1 mSv/hr

X100 position 5 - 100 mR/hr or 0 - 1 mSv/hr

X1000 position 50 - 1000 mR/hr or 0 - 10 mSv/hr

## Accuracy

Typically  $\pm 15\%$  of reading ( $\text{Cs}^{137}$ )

## Energy Sensitivity

Detects gamma and x-rays down to 40 keV.

Response is flat from 40 keV up.

## Audio Indicator

Internally mounted beeper (can be turned off for silent operation).

## Anti-Saturation

Meter will hold at full scale in fields as high as 100 times the maximum reading.



# SE. INTERNATIONAL INC



P.O. Box 39, 436 Farm Rd. Summertown, TN 38483

1-800-293-5759 | Fax: 931-964-3564

www.seintl.com | radiationinfo@seintl.com

**RADIATION**<sup>®</sup>  
A • L • E • R • T

# MC1K

OPTIONAL MINI-USB WITH OBSERVER  
SOFTWARE AVAILABLE

## Power Requirements

9-volt alkaline battery Approx. 2,000 hrs at normal background

## Temperature Range

-20° to 55°C (-4° to 131°F)

## Weight

217 g (7.7 oz) **Outputs**

3.5 mm headphone jack with pulse out.



The end panel of the MC1K Shown

## Size

209 x 71 x 50 mm (8.2 x 2.8 x 1.9 in.)

## Includes

Carrying Case (included)

## Accessories


Observer Software, Mini-B 5-Pin USB Option (Available Upon Request)

## Limited Warranty

1 year limited warranty



## MC1K ENERGY RESPONSE (Relative to Cs-137)

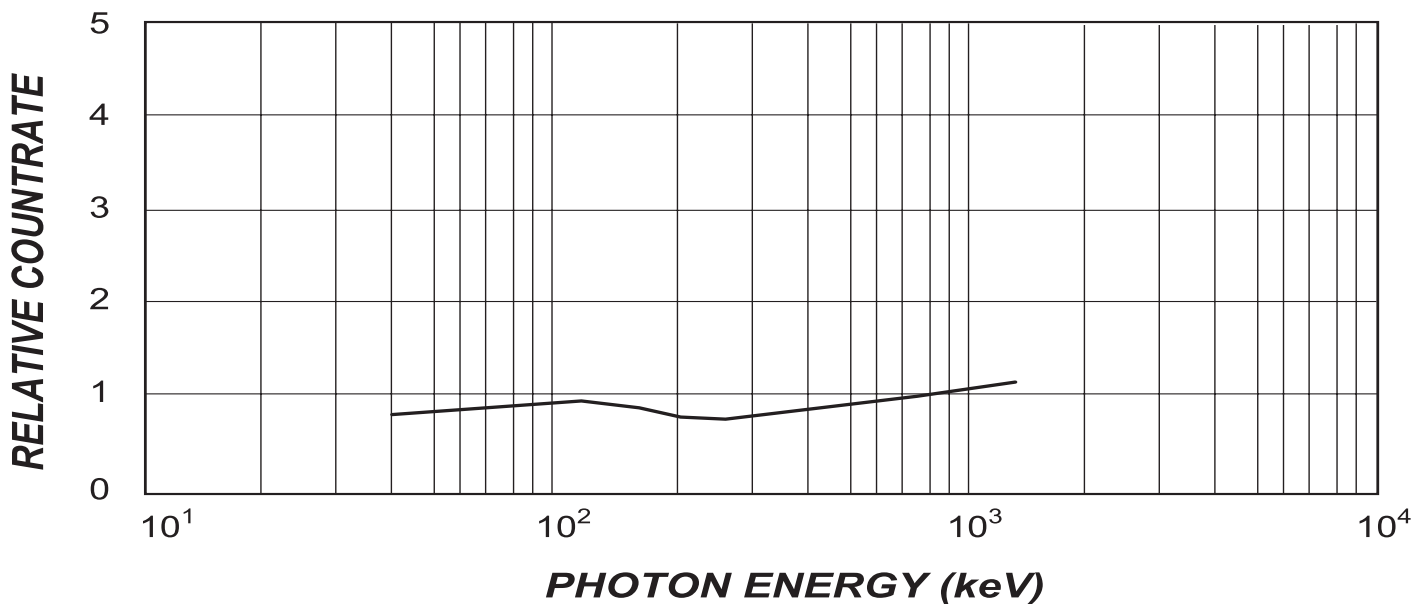

# SE. INTERNATIONAL INC



P.O. Box 39, 436 Farm Rd. Summertown, TN 38483

1-800-293-5759

Fax: 931-964-3564

www.seintl.com

radiationinfo@seintl.com

**RADIATION**<sup>®</sup>  
A • L • E • R • T